CAUTION: DISCONNECT ELECTRIC CURRENT BEFORE SERVICING

CAM	TERM. ACTIVE	TERM. FIXED	CONTACT	CIRCUIT
0	2	1	T	COLD WATER
		3	B	SI SPRAY
2	2	4	T	
		6	B	HOT WATER
4	8	7	T	LID SW BYPASS
		9	B	PUMP
6	11	10	T	SPIN DIR
		12	B	AGITATE DIR
8	14	10	T	AGITATE DIR
		12	B	SPIN DIR
10	17	10	T	
		10	B	
12	8	19	T	
		10	B	MOTOR CONTROL
14	8	19	T	P.S. BYPASS
		24	B	

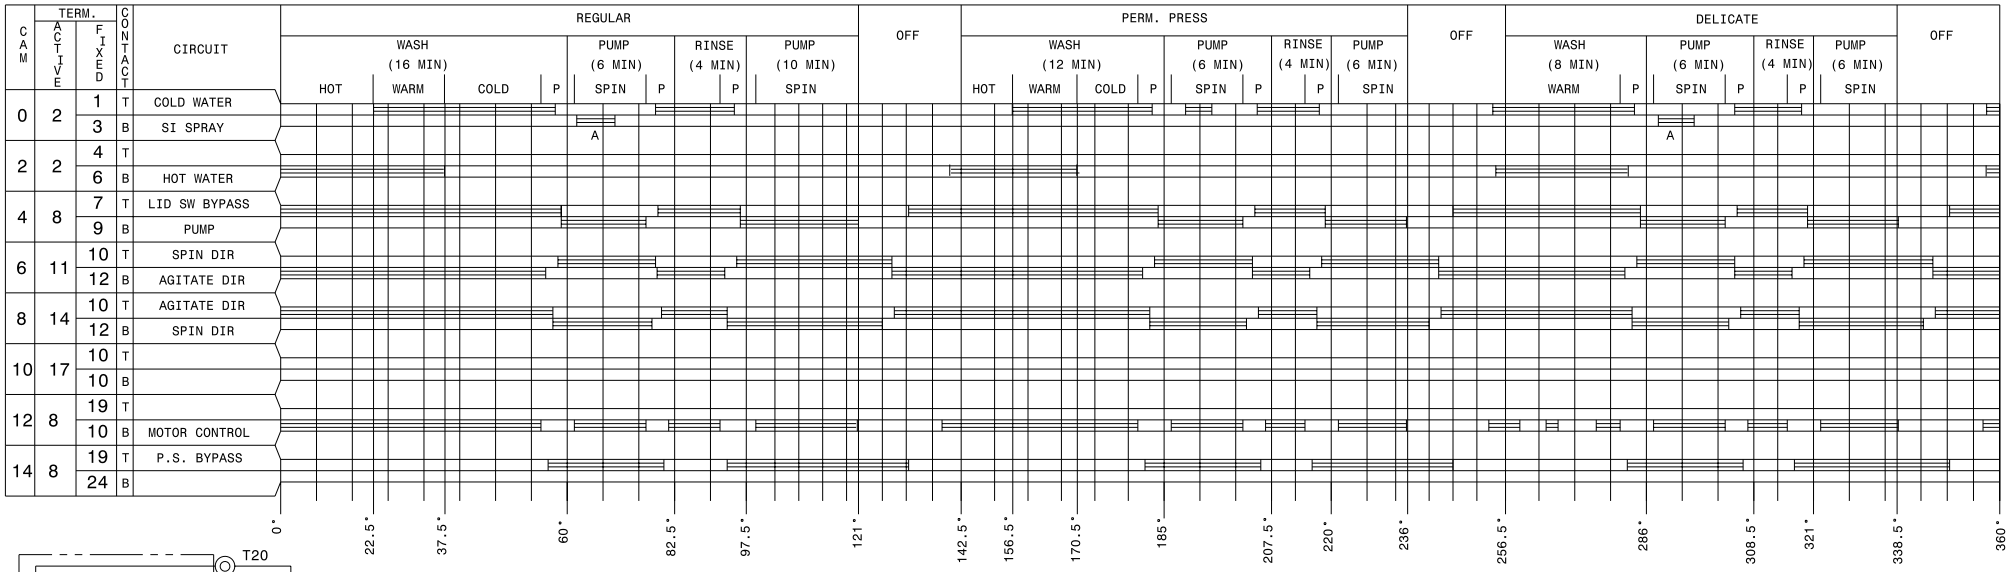

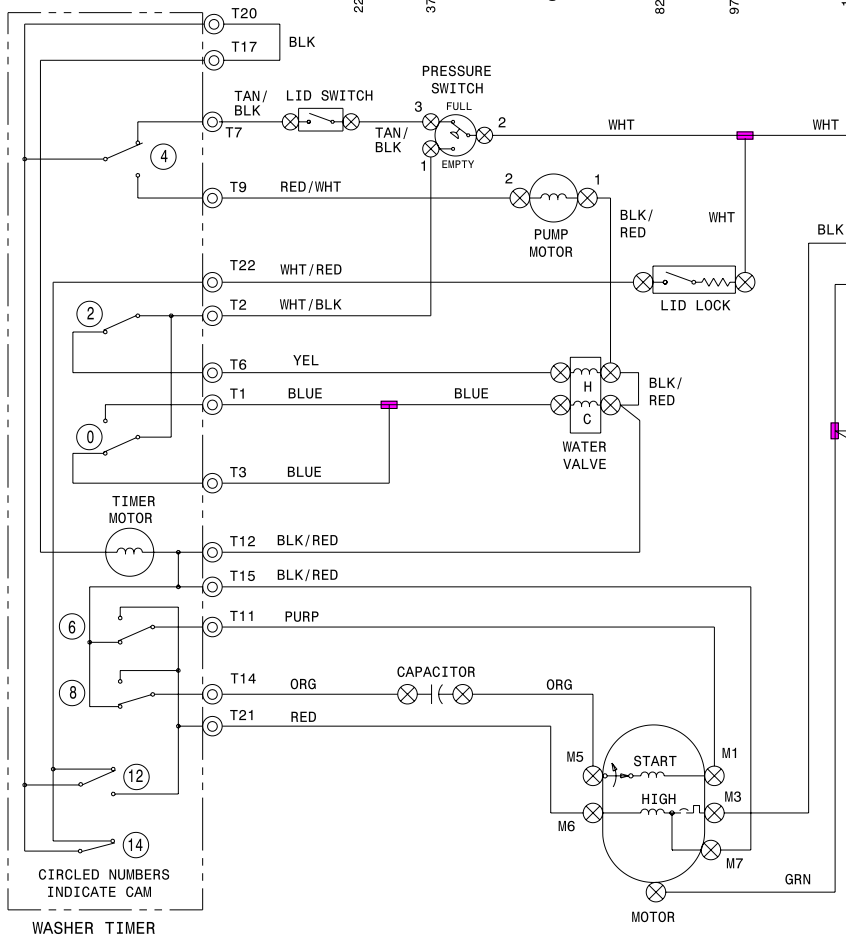

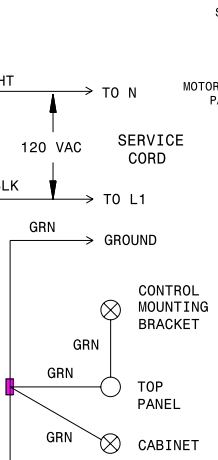

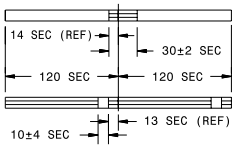

DETAIL FOR SPRAY SUBINTERVAL AND PAUSE FOR MOTOR AND PUMP CONTROL CIRCUITS.

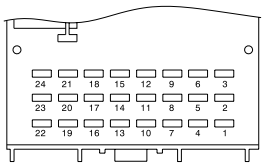

TIMER PLUG-MALE (END VIEW)

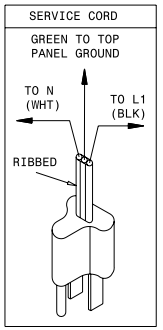

WIRING CODES
PLUG IN TIMER TERMINAL
QUICK DISCONNECT TERMINAL
SCREW TERMINAL
CONNECTION
NO CONNECTION
MOTOR SWITCH
SPLICE
MOTOR PROTECTOR
CHASSIS (CABINET) GROUND

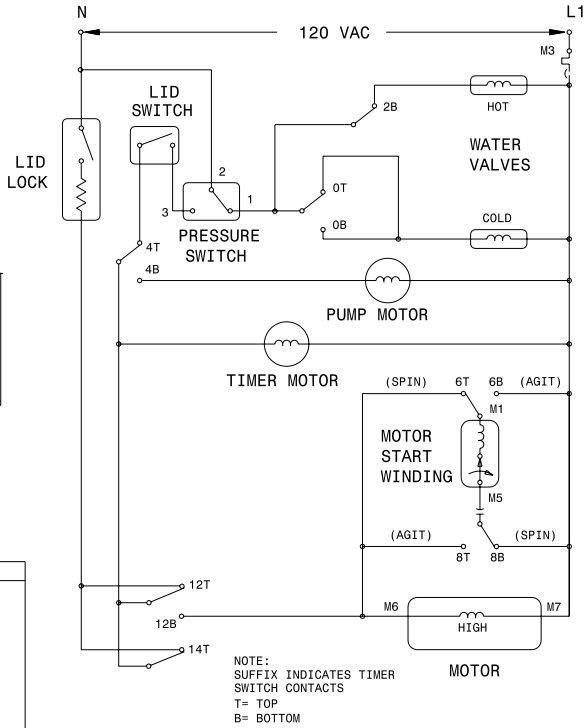

NOTE:
SUFFIX INDICATES TIMER SWITCH CONTACTS
T= TOP
B= BOTTOM

WIRING DIAGRAM 134127800